Introduction

This e-SMART MPPT (maximum Power Point Tracking) solar charge controller is a smart solar controller with automatic recognition function, smart charging and discharging function, three stages charging function to protect battery. It can increase 30%~60% efficiency than traditional PWM controller. It supports many kinds of batteries. It also have RS232 communication function.

Features

- 1. MPPT charging mode, peak efficiency up to 99%, saving 30%~60% solar panel than traditional PWM controller.
- 2. DC12V/24V/48V battery system automatic recognition, users can use it in different system conveniently.
- 3. Maximum PV input voltage up to DC100V.
- 4. Three stages charge: fast charge(MPPT), constant voltage charge, floating charge, It can protect batteries well .
- 5. Three option of discharge: on mode and off mode and PV voltage(solar) control mode.
- 6. Users can choose 4 kinds of commonly standard batteries(Sealed lead acid, Vented, Gel, NiCd). Other kinds of batteries can be defined by users.
- 7. Digital tube can display battery voltage and charging current. The software can display various parameters such as model number, PV input voltage, battery type, battery voltage, charging current, charging power, working condition.
- 8. RS232 communication, we can offer communication protocol also, it's convenient for user's integration management.
- 9. This controller can be paralleled infinitely.
- 10. <u>CE and RoHS Certifications</u> are approved. We can help clients to approve other certifications.
- 11. 2 years warranty; 3~10 years extended technical service.

Parameters

MPPT solar controller modes[] I-P-e-SMART-12V/24V/48V-series		15A	20A	25A	30A	40A	
Charge mode	ver point tracking)						
Charge method	Three stages: constant current(MPPT), constant voltage, floating charge						
System type	DC12V/24V/48V	Automatic recognition					
System voltage	12V system	DC9V~DC15V					
	24V system	DC18V~DC30V					
	48V system	DC36V~DC60V					
Soft start time	12V/24V/48V system	≤3S					
Dynamic response recovery time	12V/24V/48V system	500us					
MPPT efficiency	12V/24V/48V system	≥96.5%,≤99%					
INPUT CHARACTE	RISTICS						
MPPT working voltage range	12V system	m DC14V~DC100V					
	24V system	DC30~DC100V					
	48V system	DC60~DC100V					
Low input voltage protection point	12V system	DC14V					
	24V system	DC30V					
	48V system	DC60V					

	12V system	DC18V						
Low input voltage		DC34V						
Recovery point	48V system	DC65V						
High input voltage	igh innut voltage							
protection point	12V/24V/48V system	DC110						
High input voltage								
recovery point	12V/24V/48V system DC100V							
Maximum PV power	12V system (W)	213	284	355	426	568		
	, ,	426	568	710	852	1136		
		852	1136	1420	1704	2272		
CHARGE CHRECTE	, ,							
Selectable Battery								
I	4 0 7 7 10 4 7 7 4 0 7 7	Sealed lead acid, Vented, Gel, NiCd battery (Other types of the batteries also can be defined)∏						
(Default Gel	12V/24V/48V system					ned)∏		
battery)		, J				· -		
Constant Voltage	12V/24V/48V system	Discos shoot the shower veltage according to the better.						
Floating Charge	12V/24V/48V system	Please check the charge voltage according to the battery				the battery		
Voltage	12 V/24 V/40 V System	type form.						
Rated Input	12V/24V/48V system	1 5 A	20A	25A	30A	40A		
Current	12 V/24 V/40 V System	IJA	ZUA	ZJA	SUA	40A		
Current-limit	12V/24V/48V system	204	25A	30A	35A	45A		
Protection	12 V/24 V/40 V System	20A	ZJA	JUA	JJA	4JA		
Temperature	12V/24V/48V system	+0.02%/°C						
Factor	12 V/24 V/40 V System	±0.02707 C						
Temperature	12V/24V/48V system	14 2V ₋ (The	hiahast tan	nnerature ₋ 2	5°C)*0 3			
Compensation	12 V/24 V/40 V 3y3tCIII	14.2 V -(111C	ingnest ten	iipciature-2.	0.0			
Output	12V/24V/48V system	200mV						
Ripples(peak)	12 v/2 i v/ i o v system	200111 V						
Output Voltage								
Stability	12V/24V/48V system	≤±1.5%						
Precision								
Output Discharge C		h	. 7.					
Output voltage		Base on battery voltage						
Low voltage output		Default 10.5V; Recovery 11V; It can be adjustable.						
Protection point		, , , , , , , , , , , , , , , , , , ,						
Rated output Curre	nt	30A						
The output control	1	On mode, Off mode, PV voltage control mode						
Output control set r	node	Controller i	Controller button or PC software					
Display	1	.	01					
		Battery voltage, Charge current						
		Charging indicator light, LOAD indicator light						
<u> </u>		RS232						
Protection								
		Check the input characteristics						
<u> </u>		Check the input characteristics						
<u> </u>		yes L., .						
<u> </u>		yes						
<u> </u>		yes Loo						
Temperature protection yes								
Other Parameters								
Noise Thormal host dissipating method		≤40dB						
Thermal heat-dissipating method		Itself cooling Fan cooling						
Components		Imported material With EU standards.						
Certification	CE\FCC\Ro	15						
Physical								

Measurement D x W x H(mm)	205*168*60
package size D x W x H(mm)	265*196*110
N.G(KG)	1.8kg
G.N(KG)	2kg
Mechanical Protection	IP25
Environment	
Humidity	0~90%RH (no condense)
Altitude	0~3000m
Operating Temperature	-20°C ~ +50°C
Storage Temperature	-40°C ~ +75°C
Atmospheric Pressure	70~106kPa

Products Package

Number	quantity	Items included
1	1 pc	Controller color (blue or green is optional OEM ODM order is highly welcome)
2	2 pc	Hangers (used for controller hanging on the wall)
3	4 set	Screw
4	1 pc	RJ45 to RS232 cable
5	1 pc	Battery temperature sensor wire
6	2 pc	Fuse[]DC output[]
7	1 pc	User instruction[manual]
8	1 pc	CD












Controller PC upper software and testing software

- 1. The first picture show solar controller working status(charge and discharge), PV voltage, charge voltage, charge current etc. Users can choose the type of the batteries, DC-load output control method.
- 2. We provide <u>PC upper software</u>. Testing software is not including. (user's PC has software development platform, if needed, please apply for it)



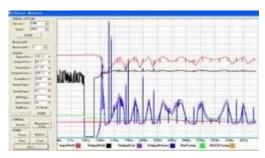

Information display and parameter setting

- 1. ENTER1 button: press left ENTER1 show 2 digital battery voltage if it is charging, then shows 2 digital charge voltage), for example, the battery voltage or charge voltage is 13.5V, it shows13, please see Figure 2.1; Press ENTER1 a little bit longer, users can set battery types.
- 2. ENTER2 button: press right ENTER2 show 2 digital battery current (if it is not charging, then it display 00, if the charge current is 22.5A, then it shows 22,please see Figure 2.2); press ENTER2 button a little bit longer, DC load control can be set (On mode, Off mode, PV voltage control mode) Please see more details in the user manual.





Applications



