The Connection diagram:



Features:

- 1. MPPT charging mode, peak efficiency up to 99%, saving $30\%\sim60\%$ solar panel than traditional PWM controller.
- 2. DC12V/24V/48V battery system automatic recognition, users can use it in different system conveniently.
- 3. Maximum PV input voltage up to DC100V.
- 4. Three stages charge: fast charge(MPPT), constant voltage charge, floating charge, It can protect batteries well .
- 5. Three option of discharge: on mode and off mode and PV voltage(solar) control mode.
- 6. Users can choose 4 kinds of commonly standard batteries(Sealed lead acid, Vented, Gel, NiCd). Other kinds of batteries can be defined by users.
- 7. Digital tube can display battery voltage and charging current. The software can display various parameters such as model number, PV input voltage, battery type, battery voltage, charging current, charging power, working condition.
- 8. RS232 communication, we can offer communication protocol also, it's convenient for user's integration management.

- 9. This controller can be paralleled infinitely.
- 10. CE and RoHS Certifications are approved. We can help clients to approve other certifications.
- 11. 2 years warranty; 3~10 years extended technical service.

Parameters:

MPPT solar contr I-P-e-SMART-12V	_	20A		
Charge mode	MPPT(maximum power point tracking)			
Charge method	Three stages: constant current(MPPT),constant voltage,floating charge			
System type	DC12V/24V/48V	Automatic recognition		
	12V system	DC9V~DC15V		
System voltage	24V system	DC18V~DC30V		
	48V system	DC36V~DC60V		
Soft start time	12V/24V/48V system	≤3S		
Dynamic response recovery time	12V/24V/48V system	500us		
MPPT efficiency	12V/24V/48V system	≥96.5%,≤99%		
INPUT CHARACT	ERISTICS			
MDDT wordsing	12V system	DC14V~DC100V		
MPPT working voltage range	24V system	DC30~DC100V		
voitage range	48V system	DC60~DC100V		
Low input	12V system	DC14V		
voltage	24V system	DC30V		
protection point	48V system	DC60V		
Low input	12V system	DC18V		
voltage	24V system	DC34V		
Recovery point	48V system	DC65V		
High input voltage protection point	12V/24V/48V system	DC110		
High input voltage recovery point	12V/24V/48V system	DC100V		
Maximum PV power	12V system (W)	284		
	24V system (W)	568		
	48V system (W)	1136		
CHARGE CHRECTRESTICS				
Selectable Battery Types (Default Gel battery)	12V/24V/48V system	Sealed lead acid, Vented, Gel, NiCd battery (Other types of the batteries also can be defined)[]		

	4 07 7/0 47 7/4 07 7				
Constant Voltage	12V/24V/48V system	Dlesse sheet the sharps valters according to the bettery			
Electing Change		Please check the charge voltage according to the battery			
Floating Charge	12V/24V/48V	type form.			
Voltage	system				
Rated Input	12V/24V/48V	20A			
Current	system				
Current-limit	12V/24V/48V	25A			
Protection	system				
Temperature	12V/24V/48V	±0.02%/°C			
Factor	system	20.0270/ 0			
Temperature	12V/24V/48V	14.2V-(The highest temperature-25°C)*0.3			
Compensation	system	14.2 v-(The highest temperature-25 C) 0.5			
Output	12V/24V/48V	200mV			
Ripples(peak)	system	200111			
Output Voltage	12V/24V/48V				
Stability		≤±1.5%			
Precision	system				
Output Discharge	Characteristics				
Output voltage		Base on battery voltage			
Low voltage outp	ut	Default 10 5V. Decovery 11V. It can be adjustable			
Protection point		Default 10.5V; Recovery 11V; It can be adjustable.			
Rated output Cur	rent	30A			
The output contro		On mode, Off mode, PV voltage control mode			
Output control set mode		Controller button or PC software			
Display	0 1110 0 10	00111201101 2000011 01 1 0 001011 010			
LED digital tube display		Battery voltage, Charge current			
LED light display	aiopiuy	Charging indicator light, LOAD indicator light			
PC□communication port□		RS232			
Protection	ni port⊔	10202			
Low input voltage	nrotoction	Check the input characteristics			
High input voltage		Check the input characteristics Check the input characteristics			
		-			
Charge overpowe		yes Lan			
Discharge low vol	<u> </u>	yes			
Discharge high cu		yes			
		yes			
Other Parameters		40.17			
Noise		≤40dB			
Thermal heat-diss	sipating method	Itself cooling Fan cooling			
Components		Imported material With EU standards.			
		CE\FCC\RoHS			
Physical	T.I. T.I.	b o Elita goligo			
Measurement D x	, ,	205*168*60			
package size D x W x H(mm)		265*196*110			
N.G(KG)		1.8kg			
G.N(KG)		2kg			
Mechanical Protection		IP25			
Environment					
Humidity		0~90%RH (no condense)			
Altitude		0~3000m			
Operating Temperature		-20°C ~ +50°C			
Storage Temperature		-40°C ~ +75°C			
Atmospheric Pressure		70~106kPa			
<u>'</u>					

- 1. The specification is only for reference. Subject to change without prior notice
- 2. We provide OEM and ODM service. The 36V/72V/96V model also can be customized for you.

Products Package


Number	quantity	Items included
1	1 pc	Controller color (blue or green is optional OEM ODM order is highly welcome)
2	2 pc	Hangers (used for controller hanging on the wall)
3	4 set	Screw
4	1 pc	RJ45 to RS232 cable
5	1 pc	Battery temperature sensor wire
6	2 pc	Fuse[]DC output[]
7	1 pc	User instruction[manual]
8	1 pc	CD

Controller PC upper software and testing software

1. Controller PC upper software and testing software can display information. Users can set parameters via PC upper software.



Graphical: PC upper software

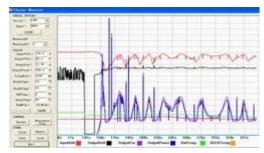

Graphical: testing software

- 1.1 The first picture show solar controller working status(charge and discharge), PV voltage, charge voltage, charge current etc. Users can choose the type of the batteries, DC-load output control method.
- 1.2 We provide PC upper software. Testing software is not including. (user's PC has software development platform, if needed, please apply for it)
- 2. Information display and parameter setting.





Figure 2.1

Figure 2.2

- 2.1 ENTER1 button: press left ENTER1 show 2 digital battery voltage ☐ it is charging, then shows 2 digital charge voltage), for example, the battery voltage or charge voltage is 13.5V, it shows13, please see Figure 2.1; Press ENTER1 a little bit longer, users can set battery types.
- 2.2 ENTER2 button: press right ENTER2 show 2 digital battery current (if it is not charging, then it display 00, if the charge current is 22.5A, then it shows 22,please see Figure 2.2); press ENTER2 button a little bit longer, DC load control can be set (On mode, Off mode, PV voltage control mode)

Please see more details in the user manual.

Other detailed parameters

Please see the outline of the design, technical documents, user manuals etc.